HARDWARE TRAINING CLASS

MARK 2T DISCUTILITY

VERSION 2.2

Ł

-

1000

SAMPLE DIALOGS

ELTA DATA SYSTEMS, INC. ELTA BON E, 1322 31217 PASHVILIS 365-1418 (615) 365-1418

SAMPLE DIALOGS WITH THE

MARK 2T DISCUTILIY STANDALONE

ĺ,

調整

THE MARK 2T REQUIRES THE USE OF ITS OWN DISCUTILITY TO USE THE DISC, FLOPPY, AND STREAMER TAPE PERIPHERIALS TO FORMAT, RESTORE, COPY, AND VERIFY.

CONTENTS				
		============		
1.	TITLE AND CONTENTS	PAGE 2		
2.	DISCUTILITY OPTION FLAG WORD (PRESCAN DISABLE INFO)	3		
3.	DISCUTILITY PROGRAM INDEX	4		
4.	<f>ORMAT PROGRAM</f>	5		
5.	<c>OPY PROGRAM</c>	13		
6.	<s>AVE PROGRAM</s>	14		
7.	<r>ESTORE PROGRAM</r>	15		
8.	<v>ERIFY</v>	17		
9.	<t>ENSION TAPE PROGRAM</t>	19		
10.	<i>PL FROM DISC</i>	20		


NOTE : DISCUTILITY FOR THE MARK 3 IS UNDERGOING CONSTANT CHANGE. CHECK WITH POINT 4 FOR LATEST VERSION AND OPERATING INSTUCTIONS.

POINT 4 MARK 2T

DISCUTILITY OPTION

FLAG WORD

NOTE : DISABLE PRESCAN BY SETTING BIT 14 OF THE OPTION FLAG WORD TO ONE. (LOC. 200 = 40000)

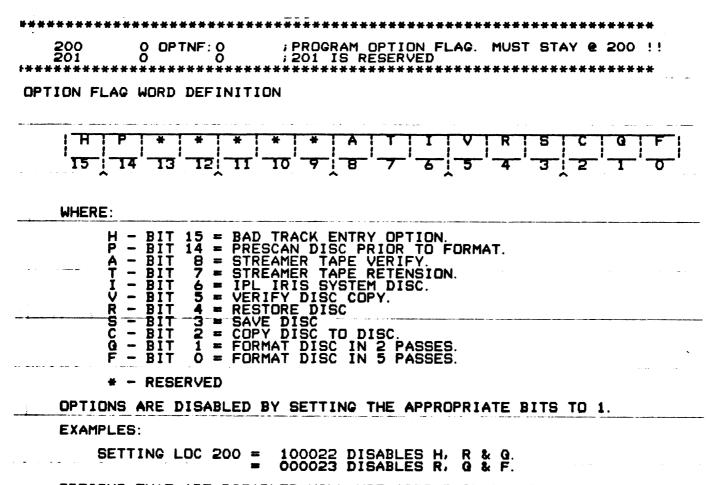

OPTIONS THAT ARE DISABLED WILL NOT APPEAR IN THE PROGRAM HELP MENU.

PROGRAM DIRECTORY

Η

1

MARK 2T DISC UTILITIES

VERSION 2.2 JUNE 11, 1984

- - - - N O T I C E - - - - ALL NUMBERS ARE IN OCTAL. TYPE 'H' FOR HELP ANYTIME.

PROGRAM NAME: H

PROGRAM

PURPOSE

<f>ORMAT</f>	- FORMAT AND ANALYZE SURFACES IN 5 PASSES
<q>UICK FORMAT</q>	- FORMAT AND ANALYZE SURFACES IN 2 PASSES
<c>OPY</c>	- COPY SOURCE DISC TO DESTINATION
<s>AVE DISC</s>	- DISC BACKUP, SAVE DATA ON TAPE OR DISC
<r>ESTORE DISC</r>	- RESTORE DISC FROM BACKUP TAPE OR DISC
<v>ERIFY COPY</v>	- VERIFY COPIED DATA AGAINST SOURCE
<i>PL</i>	- IPL SYSTEM DISC
<t>APE</t>	- RETENSION TAPE
<pre><str>eamer verify</str></pre>	- VERIFY DISC AGAINST TAPE

FORMAT PROGRAM

PROGRAM NAME: F

TYPE OF DRIVE: H

ST506 WINCHESTER DRIVES

CODE	MNEMONIC	TYPE	CAPACITY	CYL'S	HEADS	SECT'S	MODEL
4	N TT 7 0		20MB	1206	3	20	3020
1	ATI20	WIN	ZUMB	1200	J	20	3020
2	ATI46	WIN	46MB	1206	7	20	3046
3	CMI19	WIN	19MB	462	6	20	5619
4	CMI12	WIN	1 2 M B	462	4	20	5412

5 1/4'' FLOPPY DISKETTE DRIVES

CODE MNEMONIC TYPE CAPACITY CYL'S HEADS SECT'S MODEL

12 F52D FLOPPY 1MB 115 2 20

TYPE OF DRIVE: 2

DRIVE NUMBER: H

í

0 THRU 3 FOR DISC

NO DEFAULTS ALLOWED !! DRIVE NUMBER: 0

FORMAT cont.

SURFACE(S): H

'ALL' FOR ALL SURFACES

SURFACE(S): ALL

WHEN DRIVE IS READY, HIT RETURN TO START

READING ALTERNATE SECTOR INFORMATION

FORMATTING

CURRENT	CYLINDER	=40
CURRENT	CYLINDER	=100
CURRENT	CYLINDER	=140
CURRENT	CYLINDER	=200
CURRENT	CYLINDER	=240
CURRENT	CYLINDER	= 300
CURRENT	CYLINDER	=340
CURRENT	CYLINDER	=400
CURRENT	CYLINDER	=440
CURRENT	CYLINDER	=500
CURRENT	CYLINDER	=540
CURRENT	CYLINDER	=600
CURRENT	CYLINDER	=640
CURRENT	CYLINDER	=700
CURRENT	CYLINDER	=740
CURRENT	CYLINDER	=1000
CURRENT	CYLINDER	=1040
CURRENT	CYLINDER	=1100
CURRENT	CYLINDER	=1140
CURRENT	CYLINDER	=1200
CURRENT	CYLINDER	=1205

FORMAT DONE

.

FORMAT cont.

SURFACE ANALYSIS

WRITING

(

,

CURRENT	CYLINDER	=40
CURRENT	CYLINDER	=100

CURRENT	CYLINDER	=140
CURRENT	CYLINDER	=200
CURRENT	CYLINDER	=240
CURRENT	CYLINDER	= 300
CURRENT	CYLINDER	=340
CURRENT	CYLINDER	=400
CURRENT	CYLINDER	=440
CURRENT	CYLINDER	=500
CURRENT	CYLINDER	=540
CURRENT	CYLINDER	=600
CURRENT	CYLINDER	=640
CURRENT	CYLINDER	=700
CURRENT	CYLINDER	=740
CURRENT	CYLINDER	=1000
CURRENT	CYLINDER	=1040
CURRENT	CYLINDER	=1100
CURRENT	CYLINDER	=1140
CURRENT	CYLINDER	=1200
CURRENT	CYLINDER	=1205

READING

CURRENT	CYLINDER	=40
CURRENT	CYLINDER	=100
CURRENT	CYLINDER	=140
CURRENT	CYLINDER	=200
CURRENT	CYLINDER	=240
CURRENT	CYLINDER	=300
CURRENT	CYLINDER	= 340
CURRENT	CYLINDER	=400
CURRENT	CYLINDER	=440
CURRENT	CYLINDER	=500
CURRENT	CYLINDER	=540
CURRENT	CYLINDER	=600
CURRENT	CYLINDER	=640
CURRENT	CYLINDER	=700
CURRENT	CYLINDER	=740
CURRENT	CYLINDER	=1000
CURRENT	CYLINDER	=1040
CURRENT	CYLINDER	=1100
CURRENT	CYLINDER	=1140
CURRENT	CYLINDER	=1200
CURRENT	CYLINDER	=1205

PAGE 7

DONE PASS 1

FORMAT cont.

WRITING

ĺ

Sec.

COD MARK

CURRENT	CYLINDER	=40
CURRENT	CYLINDER	=100
CURRENT	CYLINDER	=140
CURRENT	CYLINDER	=200
CURRENT	CYLINDER	=240
CURRENT	CYLINDER	=300
CURRENT	CYLINDER	=340
CURRENT	CYLINDER	=400
CURRENT	CYLINDER	=440
CURRENT	CYLINDER	=500
CURRENT	CYLINDER	=540
CURRENT	CYLINDER	=600
CURRENT	CYLINDER	=640
	CYLINDER	=700
CURRENT		=740
CURRENT	CYLINDER	
CURRENT	CYLINDER	=1000
CURRENT	CYLINDER	=1040
CURRENT	CYLINDER	=1100
CURRENT	CYLINDER	=1140
CURRENT	CYLINDER	=1200
CURRENT	CYLINDER	=1205
READING		
READING CURRENT	CYLINDER	=40
	CYLINDER CYLINDER	=40 =100
CURRENT		
CURRENT CURRENT CURRENT	CYLINDER	=100
CURRENT CURRENT	CYLINDER CYLINDER	=100 =140
CURRENT CURRENT CURRENT CURRENT	CYLINDER CYLINDER CYLINDER CYLINDER	=100 =140 =200
CURRENT CURRENT CURRENT CURRENT CURRENT	CYLINDER CYLINDER CYLINDER	=100 =140 =200 =240
CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT	CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER	=100 =140 =200 =240 =300
CURRENT CURRENT CURRENT CURRENT CURRENT	CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER	=100 =140 =200 =240 =300 =340
CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT	CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER	=100 =140 =200 =240 =300 =340 =400
CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT	CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER	=100 =140 =200 =240 =300 =340 =400 =440 =500
CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT	CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER	=100 =140 =200 =240 =300 =340 =400 =440 =500 =540
CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT	CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER	=100 =140 =200 =240 =300 =340 =400 =440 =500 =540
CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT	CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER	= 1 0 0 = 1 4 0 = 2 0 0 = 2 4 0 = 3 0 0 = 3 4 0 = 4 0 0 = 5 0 0 = 5 4 0 = 6 0 0
CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT	CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER	=100 =140 =200 =240 =300 =340 =400 =440 =500 =540 =600 =640
CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT	CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER	= 1 00 = 1 40 = 200 = 240 = 300 = 340 = 400 = 440 = 500 = 540 = 600 = 640 = 700
CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT	CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER	=100 =140 =200 =240 =340 =400 =440 =500 =540 =600 =640 =700 =740
CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT	CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER	= 1 0 0 = 1 4 0 = 2 0 0 = 2 4 0 = 3 0 0 = 3 4 0 = 4 0 0 = 4 4 0 = 5 0 0 = 5 4 0 = 6 0 0 = 6 4 0 = 7 0 0 = 7 4 0 = 1 0 0 0 = 1 0 4 0
CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT	CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER	= 1 0 0 = 1 4 0 = 2 0 0 = 2 4 0 = 3 0 0 = 3 4 0 = 4 0 0 = 4 4 0 = 5 0 0 = 5 4 0 = 6 0 0 = 6 4 0 = 7 4 0 = 1 0 0 0 = 1 0 4 0 = 1 1 0 0
CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT	CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER	= 1 0 0 = 1 4 0 = 2 0 0 = 2 4 0 = 3 0 0 = 3 4 0 = 4 0 0 = 5 4 0 = 5 0 0 = 5 4 0 = 6 0 0 = 6 4 0 = 7 0 0 = 7 4 0 = 1 0 0 0 = 1 1 0 0 = 1 1 4 0
CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT CURRENT	CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER CYLINDER	= 1 0 0 = 1 4 0 = 2 0 0 = 2 4 0 = 3 0 0 = 3 4 0 = 4 0 0 = 4 4 0 = 5 0 0 = 5 4 0 = 6 0 0 = 6 4 0 = 7 4 0 = 1 0 0 0 = 1 0 4 0 = 1 1 0 0

PAGE 8

DONE PASS 2

FORMAT cont.

WRITING

CURRENT	CYLINDER	=40
CURRENT	CYLINDER	=100
CURRENT	CYLINDER	=140
CURRENT	CYLINDER	=200
CURRENT	CYLINDER	=240
CURRENT	CYLINDER	= 300
CURRENT	CYLINDER	= 340
CURRENT	CYLINDER	=400
CURRENT	CYLINDER	=440
CURRENT	CYLINDER	=500
CURRENT	CYLINDER	=540
CURRENT	CYLINDER	=600
CURRENT	CYLINDER	=640
CURRENT	CYLINDER	=700
CURRENT	CYLINDER	=740
CURRENT	CYLINDER	=1000
CURRENT	CYLINDER	=1040
CURRENT	CYLINDER	=1100
CURRENT	CYLINDER	=1140
CURRENT	CYLINDER	=1200
CURRENT	CYLINDER	=1205

READING

CURRENT	CYLINDER CYLINDER	=100
CURRENT	CYLINDER CYLINDER CYLINDER	=200
CURRENT	CYLINDER	= 300

CURRENT	CYLINDER	= 340	
CURRENT	CYLINDER	=400	
CURRENT	CYLINDER	=440	
CURRENT	CYLINDER	=500	
CURRENT	CYLINDER	=540	
CURRENT	CYLINDER	=600	
CURRENT	CYLINDER	=640	
CURRENT	CYLINDER	=700	
CURRENT	CYLINDER	=740	
CURRENT	CYLINDER	=1000	
CURRENT	CYLINDER	=1040	
CURRENT	CYLINDER	=1100	
CURRENT	CYLINDER	=1140	
CURRENT	CYLINDER	=1200	_
CURRENT	CYLINDER	=1205	P

PAGE 9

(

Ĺ

-

FORMAT cont.

WRITING

~

CURRENT	CYLINDER	=40
CURRENT	CYLINDER	=100
CURRENT	CYLINDER	=140
CURRENT	CYLINDER	=200
CURRENT	CYLINDER	=240
CURRENT	CYLINDER	=300
CURRENT	CYLINDER	= 340
CURRENT	CYLINDER	=400
CURRENT	CYLINDER	=440
CURRENT	CYLINDER	=500
CURRENT	CYLINDER	=540
CURRENT	CYLINDER	=600
CURRENT	CYLINDER	=640
CURRENT	CYLINDER	=700
CURRENT	CYLINDER	=740
CURRENT	CYLINDER	=1000
CURRENT	CYLINDER	=1040
CURRENT	CYLINDER	=1100
CURRENT	CYLINDER	=1140
CURRENT	CYLINDER	=1200
CURRENT	CYLINDER	=1205

READING

No.

CURRENT	CYLINDER	=40
CURRENT	CYLINDER	=100
CURRENT	CYLINDER	=140
CURRENT	CYLINDER	=200
CURRENT	CYLINDER	=240
CURRENT	CYLINDER	=300
CURRENT	CYLINDER	=340
CURRENT	CYLINDER	=400
CURRENT	CYLINDER	=440
CURRENT	CYLINDER	=500
CURRENT	CYLINDER	=540
CURRENT	CYLINDER	=600
CURRENT	CYLINDER	=640
CURRENT	CYLINDER	=700
CURRENT	CYLINDER	=740
CURRENT	CYLINDER	=1000
CURRENT	CYLINDER	=1040
CURRENT	CYLINDER	=1100
CURRENT	CYLINDER	=1140
CURRENT	CYLINDER	=1200

CURRENT CYLINDER =1205 PAGE 10

DONE PASS 4

FORMAT cont.

WRITING

ł

Ser.

.

CURRENT	CYLINDER	=40
CURRENT	CYLINDER	=100
CURRENT	CYLINDER	=140
CURRENT	CYLINDER	=200
CURRENT	CYLINDER	=240
CURRENT	CYLINDER	= 300
CURRENT	CYLINDER	=340
CURRENT	CYLINDER	=400
CURRENT	CYLINDER	=440
CURRENT	CYLINDER	=500
CURRENT	CYLINDER	=540
CURRENT	CYLINDER	=600
CURRENT	CYLINDER	=640
CURRENT	CYLINDER	=700
CURRENT	CYLINDER	=740
CURRENT	CYLINDER	=1000
CURRENT	CYLINDER	=1040
CURRENT	CYLINDER	=1100
CURRENT	CYLINDER	=1140
CURRENT	CYLINDER	=1200
CURRENT	CYLINDER	=1205

READING

CURRENT	CYLINDER	=40
CURRENT	CYLINDER	=100
CURRENT	CYLINDER	=140
CURRENT	CYLINDER	=200
CURRENT	CYLINDER	=240
CURRENT	CYLINDER	=300
CURRENT	CYLINDER	=340
CURRENT	CYLINDER	=400
CURRENT	CYLINDER	=440
CURRENT	CYLINDER	=500
CURRENT	CYLINDER	=540
CURRENT	CYLINDER	=600
CURRENT	CYLINDER	=640
CURRENT	CYLINDER	=700
CURRENT	CYLINDER	=740
CURRENT	CYLINDER	=1000
CURRENT	CYLINDER	=1040
CURRENT	CYLINDER	=1100
CURRENT	CYLINDER	=1140
CURRENT	CYLINDER	=1200
CURRENT	CYLINDER	=1205

DONE PASS 5

PAGE 11

.

ANALYSIS DONE

FORMAT cont.

THIS OPTION ALLOWS MARGINAL OR KNOWN BAD TRACKS TO BE RE-ASSIGNED. ERROR LOG PRINTOUT & INSERTION IN DECIMAL ? (Y OR CR, CR INDICATES OCTAL) Y

TOTAL DISC ERRORS: HARD = 0 SOFT = 0 RULES FOR ENTERING BAD SPOTS.

ENTER SURFACE TRACK AND SECTOR FOR EVERY BAD AREA.

***** NOTE: SECTOR NUMBERS ENTERED ARE PHYSICAL RATHER THAN LOGICAL. DO YOU WISH TO INPUT SECTOR INFO AS A BYTE OFFSET ? (N= INPUT AS SECTOR #):

TYPE 'Y' TO ENTER BAD TRACKS OR RETURN.Y

SURFACE 1

TRACK 700

WHAT?

```
TRACK 600
```

SECTOR 10

OK TO LOG ? Y

SURFACE

TOTAL DISC ERRORS: HARD = 1 SOFT = 0

PHYSICAL LOGICAL

COUNT SURFACE TRACK SECTOR SECTOR DRIVE

HARD 1 1 600 10 9 0

PROGRAM NAME:

COPY PROGRAM

PROGRAM NAME: C SOURCE DRIVE -TYPE: 2 NUMBER: 0 SURFACE(S): H 'ALL' FOR ALL SURFACES 'OPT, ALL' FOR SELECTIVE CYLINDER(S) ALL SURFACES SURFACE(S): H 'ALL' FOR ALL SURFACES

'OPT, ALL' FOR SELECTIVE CYLINDER(S) ALL SURFACES

SURFACE(S): ALL

TO THE SAME DRIVE? H

WHAT? Y

ŧ

SURFACE(S): ALL

WHEN DRIVE IS READY, HIT RETURN TO START

PROGRAM NAME:

SAVE PROGRAM

PROGRAM NAME: S
SAVE TO TAPE OR DISC (T/D) ? H
WHAT?
SAVE TO TAPE OR DISC (T/D) ? T
SOURCE DRIVE TYPE: 2
NUMBER: 0
SURFACE(S): H
'ALL' FOR ALL SURFACES
'OPT,ALL' FOR SELECTIVE CYLINDER(S) ALL SURFACES
SURFACE(S): ALL

KEY IN CREATION DATE MM-DD-YY 09-10-84 DESCRIPTOR:SAMPLE DIALOG

WHEN BOTH DISC AND TAPE UNITS ARE READY, HIT RETURN TO START

TAPE IS WRITE PROTECTED OR NO TAPE. HIT 'C' WHEN READY TO CONTINUE

PROGRAM NAME:

N.

RESTORE PROGRAM

PROGRAM NAME: R

RESTORE FROM TAPE OR DISC (T/D) ? T

DESTINATION DRIVE -

. .

- -

TYPE: 2

NUMBER: 0

SURFACE(S): H

'ALL' FOR ALL SURFACES

'OPT, ALL' FOR SELECTIVE CYLINDER(S) ALL SURFACES

SURFACE(S): ALL

IF VALIDATION OF DESCRIPTION AND DATE IS NOT DESIRED ENTER A '!'

KEY IN CREATION DATE MM-DD-YY 09-10-84

DESCRIPTOR: SAMPLE DIALOG

WHEN BOTH DISC AND TAPE UNITS ARE READY, HIT RETURN TO START

STREAMING FROM TAPE

TRANSFER COMPLETE

TOTAL DISC ERRORS: HARD = 0 SOFT = 0

NO TAPE ERROR

VERIFY TAPE AGAINST DISC ?H

PROGRAM NAME:

RESTORE cont.

TO CONTINUE THIS OPERATION USING YOUR INPUT, ENTER A '!' (EXCLAMATION POINT) STREAMING FROM TAPE TRANSFER COMPLETE

TOTAL DISC ERRORS: HARD = 0 SOFT = 0 NO TAPE ERROR VERIFY TAPE AGAINST DISC ?Y TAPE BEING PROCESSED CONTAINS FOLLOWING LBL: VOLUME SEQUENCE #: 1 CREATION DATE 09-04-84

DESCRIPTOR: POINT4

1

CHECKSUMMING TAPE

CHECKSUMS= 64205 44014 116037

RECORD COUNT= 24100

CHECKSUMMING DISC

CHECKSUMS= 64205 44014 116037

RECORD COUNT= 24100

GOOD VERIFY - RECORD CHECKSUMS FOR FUTURE REFERENCE

PROGRAM NAME:

VERIFY PROGRAM

J2

Ň,

-

MARK 2T DISC UTILITIES VERSION 2.2 JUNE 11, 1984 ----NOTICE----

ALL NUMBERS ARE IN OCTAL.

TYPE 'H' FOR HELP ANYTIME.

PROGRAM NAME: V

SOURCE DRIVE -

TYPE: 2

NUMBER: 0

SURFACE(S): ALL

TO THE SAME DRIVE? H

WHAT? Y

SURFACE(S): H

'ALL' FOR ALL SURFACES

'OPT, ALL' FOR SELECTIVE CYLINDER(S) ALL SURFACES

SURFACE(S): ALL

WHAT? ALL

WHEN DRIVE IS READY, HIT RETURN TO START

VERIFY cont.

ł

VERIFYING DESTINATION DISC DATA

DATACOMPAREERRORCYL0HEAD6SECT0DATACOMPAREERROR0CYL1HEAD6SECT0DATACOMPAREERROR0CYL2HEAD6SECT0DATACOMPAREERROR0CYL3HEAD6SECT0

CYL 4 HEAD 6 SECT 0 STOP AT READ DATA CYL 4 HEAD 6 SECT 0

DATA COMPARE ERROR

TOTAL DISC ERRORS: HARD = 0 SOFT = 0

PAGE 18

.

TENSION TAPE PROGRAM

PROGRAM NAME: T

.....

(

WHEN TAPE UNIT IS READY, HIT RETURN TO START

RETENSIONING TAPE

PROGRAM NAME:

IPL FROM DISC PROGRAM

PROGRAM NAME: I

ь į

.

TYPE OF DRIVE: 2

WHEN DRIVE IS READY, HIT RETURN TO START

PRESS RETURN

IRIS 8.2C

A LICENSED, UNPUBLISHED, RESTRICTED AND CONFIDENTIAL WORK.

IF AND WHEN THIS WORK IS PUBLISHED, THE FOLLOWING COPYRIGHT NOTICE APPLIES

COPYRIGHT (C) 1984, POINT 4 DATA CORPORATION

?? NO PICO-N ??

17031: 40401 0 0 0 0 (AFTER RESET PRESSED)